



NOTES:- The quick setup parameters should always be commissioned on new installation.
 Terminals 27 & 37 must always be at 24V for the drive to run under any condition (i.e. must be closed to 12 or 13)

Danfoss FC302
 Connection Diagram